

DART SERVICE INSTRUCTION


TO AMEND INSTALLATION DRAWING D204-618 REV. B

(REF. CANADIAN STC: SH91-40, FAA STC: SR00505NY)

FOR INSTALLATION OF D204-618-011/-012, IT IS NECESSARY TO ADD (2) D2022-101 SPACERS PER KIT TO INSTALL THE STEP. CONSEQUENTLY, LONGER BOLTS ARE NEEDED AS PER DETAIL A BELOW TO ALLOW THE INSTALLATION OF THE SPACERS. THIS CHANGE IS REQUIRED BECAUSE THE TUBE SECTION OF THE STRUTS INTERFERE WITH EACH OTHER BEFORE THE TABS CONTACT THE DOOR PLATE BRACKET.

REPLACE: QTY (1) AN4-5A BOLT WITH: QTY (1) AN4-11A BOLT

ADD: QTY (2) D2022-101 SPACERS

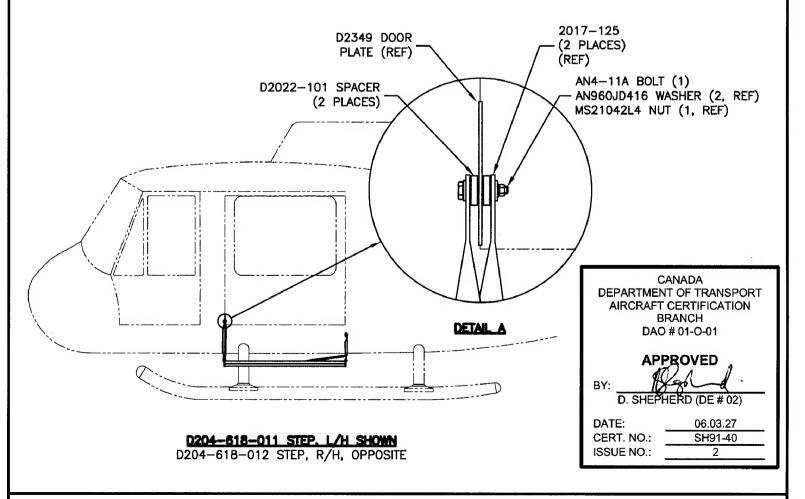

Copyright © 2006 by DART AEROSPACE LTD

THIS DOCUMENT IS PRIVATE AND CONFIDENTIAL AND IS SUPPLIED ON THE EXPRESS CONDITION THAT IT IS NOT TO BE USED FOR ANY PURPOSE OR COPIED OR COMMUNICATED TO ANY OTHER PERSON WITHOUT WRITTEN PERMISSION FROM DART AEROSPACE LTD.